

## PENULTIMATE+3DCR

# TURBO WEDGE FOR THE COMMODORE VIC20

### DOS COMMANDS

COMMODORE + RUN/STOP - load and run first program on disk (LOAD "0: \*", d, 1)

SHIFT + RUN/STOP - load and run from tape (as normal)

# - display selected drive number

#d - change selected drive number (#8 #9 #10 #11)

/name - load a BASIC program (LOAD "name", d)

%name - load a machine code program (LOAD "name", d, 1)

↑name - load and run a program (LOAD "name", d, 1 RUN)

←name - save a program (SAVE "name", d) and display status

\$ - display directory

\$C\* - display files that start with C etc.

@ - get drive status

@command - send drive command and wait for response (@UI etc.)

>command - send drive command and return immediately

@C:newfile=existingfile - copy a file on the same diskette

@R:newname=oldname - rename a file

@S:name scratch (delete) a file (wildcards supported)

@UI - get drive ID string

@UI- - reduce send delay (VIC20 only)

@UI+ - increase send delay (for C64 compatibility)

### REAL DRIVE COMMANDS

@I - re read disk (after disk change)

@N:diskname,id - format a disk with name and id

@N:diskname - quick format a previously formatted disk

@V - validate a disk - tidy up free blocks, unclosed files etc.

### SD2IEC COMMANDS

@CD:name - change directory

@CD:name.d64 - mount a disk image

@MD:name - create a directory

@RD:name - delete a directory

@CD← - change back / unmount disk image

@XE+ - enable extension hiding

@XE- - disable extension hiding

@XW - remember changes to XE and UI after reset

@X? - display extended drive ID