



# C64 Centronics Printer Cable

Requires a cartridge with Centronics support (TFCIII or ActionReplay.)



(To the C64).

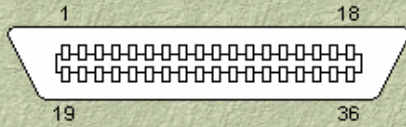

(To the Printer)

DZM 12 DREH to the C64 UserPort.

36 PIN CENTRONICS MALE to the Printer.

	C64	Dir	Printer	
GND	1,12,A,N	—	19-30,33	Ground
FLAG2	B	←	10	Acknowledge
PB0	C	→	2	Data 0
PB1	D	→	3	Data 1
PB2	E	→	4	Data 2
PB3	F	→	5	Data 3
PB4	H	→	6	Data 4
PB5	J	→	7	Data 5
PB6	K	→	8	Data 6
PB7	L	→	9	Data 7
PA2	M	→	1	Strobe
GND	3	→	31	Initialize Printer